

Measure Humidity - Basics

Dalton's Law

Air is a mixture of different gases. Under normal environmental conditions the gases have an ideal behaviour, i.e. each gas molecule can act independently from all others. **Dalton's law** is valid :

The total pressure of a gas is the sum of the partial pressures

$$p \text{ [mbar, hPa]} = p_{N_2} + p_{O_2} + p_{Ar} + \dots$$

The partial pressure p is defined as the pressure of a gas, if it would occupy alone the whole volume of the gas mixture.

Water in its gaseous phase (vapour) is also a component of air mixture. Under normal conditions it behaves like an ideal gas. With Dalton's law p becomes:

$$p \text{ [mbar, hPa]} = p_{N_2} + p_{O_2} + p_{Ar} + \dots + e$$

or

$$p \text{ [mbar, hPa]} = p_{da} + e$$

e partial pressure of (water) vapour
 p_{da} partial pressure of dry air

Vapour Pressure Above Liquid

The concentration of water vapour in air is limited. There is a maximum partial pressure of vapour which depends on temperature. Air at high temperature can take more vapour than at low temperature.

This behaviour can be explained as follows :
The molecules in a liquid are moving with different velocities (or energies) whereby the average energy is proportional to the temperature of the liquid. With respect to energy, the water molecules show a statistical distribution as in Fig. 1.

The molecules with energy lower than the binding energy of the liquid cannot leave the water surface. Those with higher energy can leave the water.

They evaporate and increase the vapour partial pressure in the air (Fig. 2).

The opposite phenomenon happens with the water vapour molecules. Those with lower energy than the binding level of the liquid condensate on the water surface and decrease the vapour partial pressure in the air.

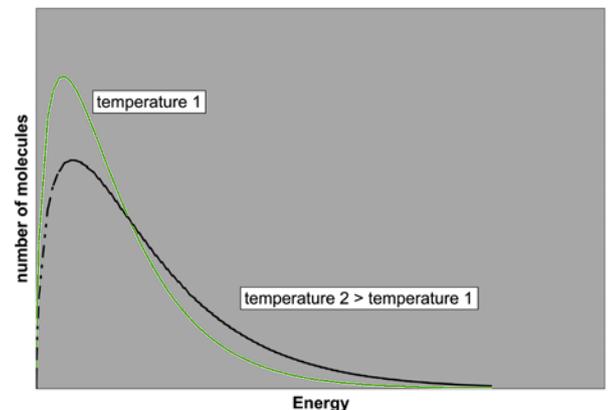


Fig.1: Statistical energy distribution of molecules in a liquid.

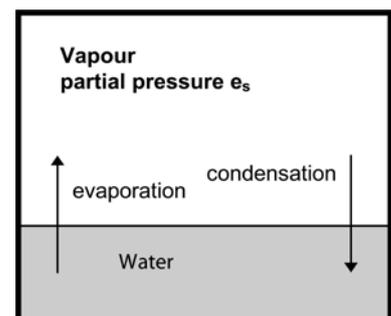


Fig.2 : Equilibrium at temperature T.

In a closed volume partly filled with water at temperature T (Fig.2) there is an equilibrium between evaporation and condensation. If there is a lack of water molecules in the moist region, more evaporation will occur and the vapour concentration will increase. In the opposite case more molecules will condense than evaporate and the vapour concentration will decrease.

The balance between evaporation and condensation leads to a vapour partial pressure (respectively concentration) which only depends on temperature.

A temperature rise will increase the energy of water molecules (Fig.1) and the balance will be shifted to higher vapour concentration.

For equilibrium at temperature T the vapour concentration (or water partial pressure e or number of water molecules per m³) is the maximum concentration which can exist at this temperature and cannot be exceeded. A higher concentration would lead to condensation again and after a short time the old balance would be reached.

This vapour concentration is called saturated concentration or in terms of partial pressure **saturation vapour pressure above water e_{ws}** at temperature T.

The saturation pressure above water e_{ws} has an exponential dependence on T and is given in Tab.1.

Vapour Pressure Above Ice

Below 0.01°C (32.018°F) (triple point of water) water can exist in a liquid phase as well as in a solid phase (ice) whereby the liquid phase is not stable. For temperatures lower than 0.01°C (32.018°F), in addition to vapour pressure above water there is also a vapour pressure above ice. (Tab 2.)

T [°C/°F]	e_{ws} [mbar]	T [°C/°F]	e_{ws} [mbar]
100/212	1014.19	0/32	6.112
90/194	701.82	-10/14	2.8652
80/176	474.16	-20/-4	1.2559
70/158	312.02	-30/-22	0.5103
60/140	199.48	-40/-40	0.1903
50/122	123.53	-50/-58	0.0644
40/104	73.853	-60/-140	0.0195
30/86	42.470	-70/-94	5.187E-03
20/68	23.392	-80/-112	1.190E-03
10/50	12.281	-90/-130	2.298E-04
0.01/32.018	6.117	-100/-148	3.622E-05

Tab.1: Saturation vapour pressure values e_{ws} above water.

T [°C/°F]	e_{is} [mbar]
0.01	6.117
0/32	6.112
-10/14	2.5989
-20/-4	1.0324
-30/-22	0.3800
-40/-40	0.1284
-50/-58	0.0394
-60/-140	0.0108
-70/-94	2.615E-03
-80/-112	5.472E-04
-90/-130	9.670E-05
-100/-148	1.402E-05

Tab.2: Saturation vapour pressure values e_{is} above ice.

Consequently there are two saturation curves below 0.01°C (32.018°F) which are given in Fig.3 in a logarithmic scale. From -100°C to 100°C (-48°F to 212°F) the saturation vapour pressure is changing over 8 orders of magnitude.

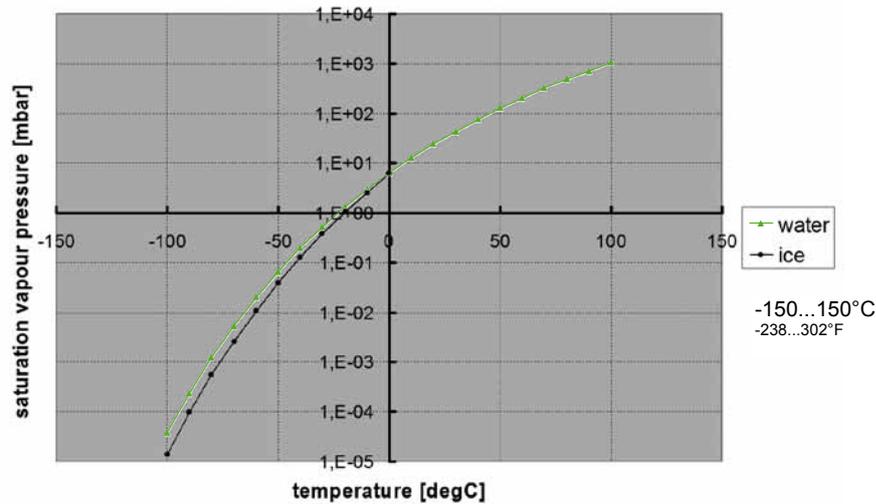


Fig.3 : Vapour saturation curves above ice and water. Below the triple point (0.01°C/32.018°F) the curve splits into two graphs.

Real Gas Correction

Up to now we have regarded water vapour as an ideal gas, i.e. water molecules act independently from each other in the air mixture.

In reality there is a small interaction between molecules which leads to a small increase of saturation vapour in air. This is described by an enhancement factor $f(p,T)$.

For normal pressure the enhancement factor is near one and can be neglected. In this case, water vapour can be seen as an ideal gas.

Humidity Functions

Relative Humidity RH [%RH]

Tab.1 and Tab.2 give the values for saturation vapour pressure as a function of temperature. These values are maximum values and cannot be exceeded. Usually the partial vapour pressure is lower.

Relative humidity RH is defined as the ratio between the actual partial vapour pressure e and the saturation vapour pressure above water e_{ws} :

$$RH = (e / e_{ws}) * 100 \quad [\%RH]$$

Absolute Humidity (vapour density) dv [g/m³ / gr/f³]

is the mass of water in 1 m³ moist air.

$$dv = mv / v \quad [g/m^3] \quad \begin{array}{l} mv... \text{ mass of water vapour} \\ v... \text{ air volume} \end{array}$$

Dew Point T_d [°C / °F]

When cooling air with **non saturated vapour pressure e** the partial pressure will stay constant for a while. Simultaneously the relative humidity will increase due to decreasing saturation vapour pressure:

$$RH = (e / e_{ws}) * 100 \quad e_{ws} = e_{ws}(T) \quad [\%] \quad T \text{ decreasing} \implies e_{ws} \text{ decreasing} \implies RH \text{ increasing}$$

At 100% RH the partial pressure of vapour e in the air equals the saturation vapour pressure above water $e_{ws}(T)$:

$$e = e_{ws}(T)$$

If the temperature decreases further, condensation will start.

The dew point Temperature T_d is the temperature where condensation begins.

Mixing Ratio r [g/kg / gr/lb]

r is the mass of water to evaporate and mix with 1 kg dry air to perform a certain relative humidity or partial vapour pressure e .

Specific Enthalpy h [kJ/kg / lbf/lb]

The enthalpy of 1 kg moist air with relative humidity **RH** and corresponding mixing ratio r at temperature **T** is the total energy you need

- to warm up dry air from 0°C/°F to T
- to evaporate the water (latent heat of water)
- to warm up the vapour from 0°C/°F up to T

The specific enthalpy is a relative quantity, i.e. only variations are of interest, not the absolute value. The variation of enthalpy is the measure of energy required to transform the moist air from one equilibrium state to another.

example 1 :

To warm up air from 20°C to 25°C (68°F to 77°F) and humidify the air from 40% RH to 60% RH 20.2 kJ/kg would be needed.

	T [°C]	RH [%RH]	h [kJ/kg]
state 1	20	40	34.6
state 2	25	60	54.8
		difference	20.2

example 2 :

Warming up from 20 to 25°C (68°F to 77°F) at constant relative humidity 40% requires only 10.3 kJ/kg.

	T [°C]	RH [%RH]	h [kJ/kg]
state 1	20	40	34.6
state 2	25	40	44.9
		difference	10.3

example 3 :

Warming up from 20 to 25°C (68°F to 77°F) at constant partial vapour pressure (i.e. $e = \text{const}$, $r = \text{const}$, $Td = \text{const}$), the relative humidity decreases from 40% to 29.5% RH. This requires only 5.1 kJ/kg energy.

	T [°C]	RH [%RH]	h [kJ/kg]
state 1	20	40	34.6
state 2	25	29.5	39.7
		difference	5.1

Mollier Diagram

The Mollier diagram is a very useful instrument to solve HVAC-problems graphically. It includes all humidity functions in one chart.

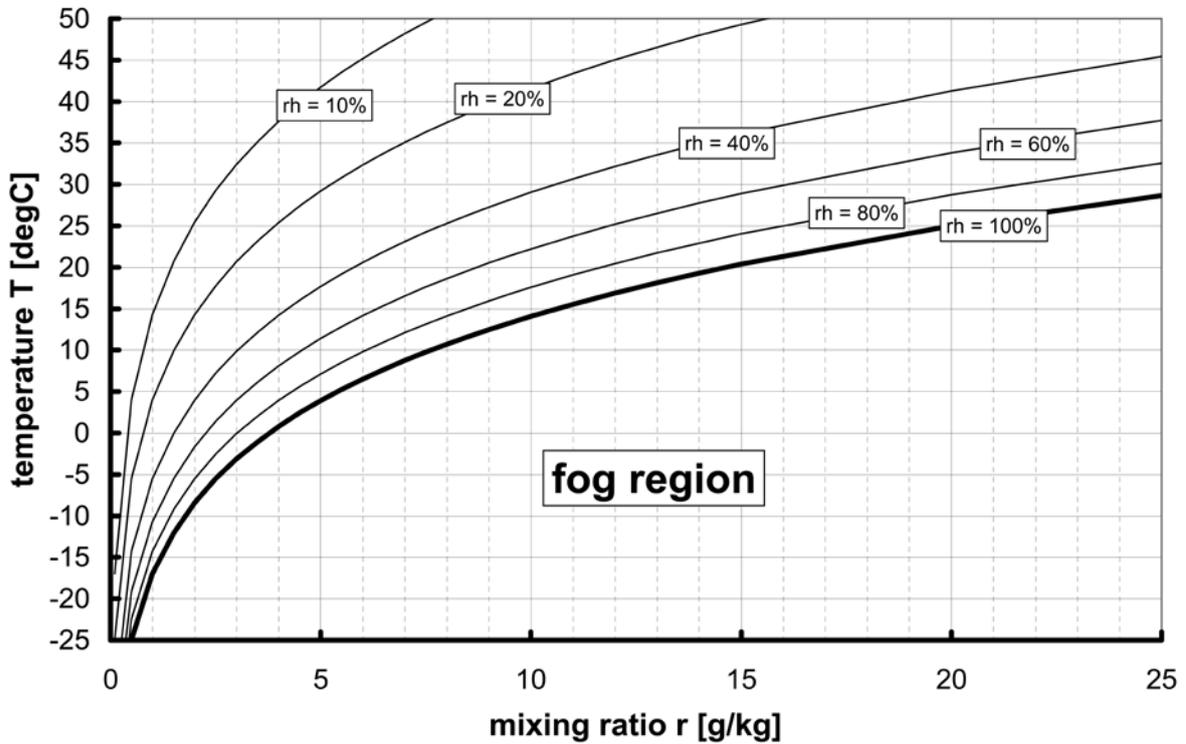


Fig. 4a : Mollier diagram: curves of constant relative humidity . The region below 100% (fog region) is not valid because condensation occurs.








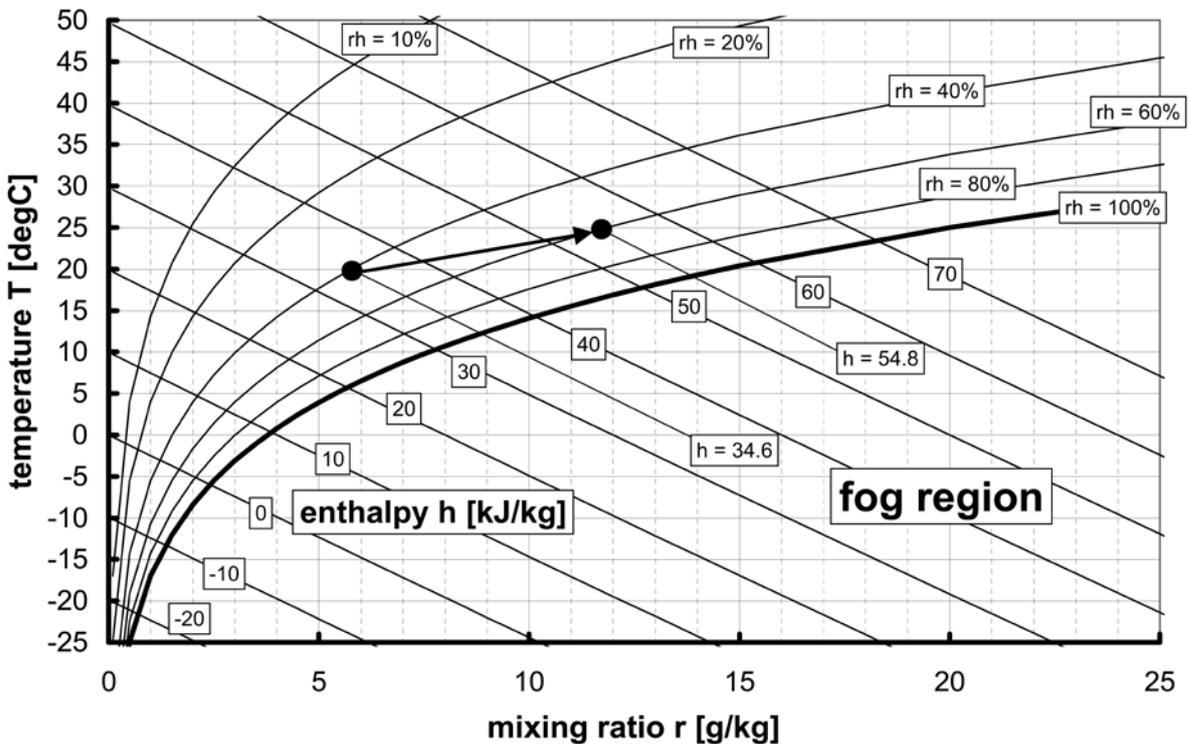


Fig. 4b : Curves of constant enthalpy are added to Fig.4a . Also example 1 is included.

Accuracies of Calculated Variables

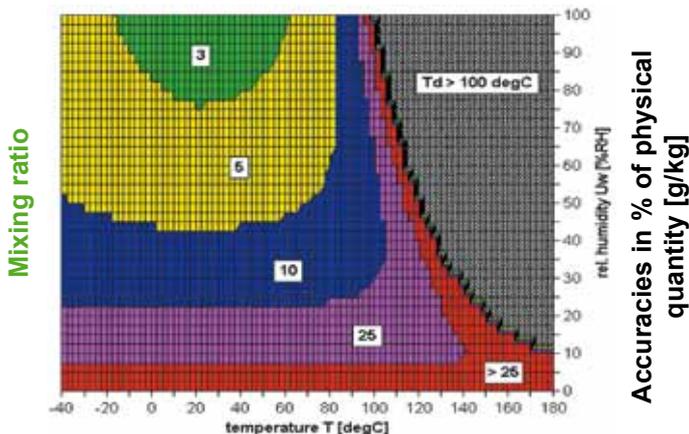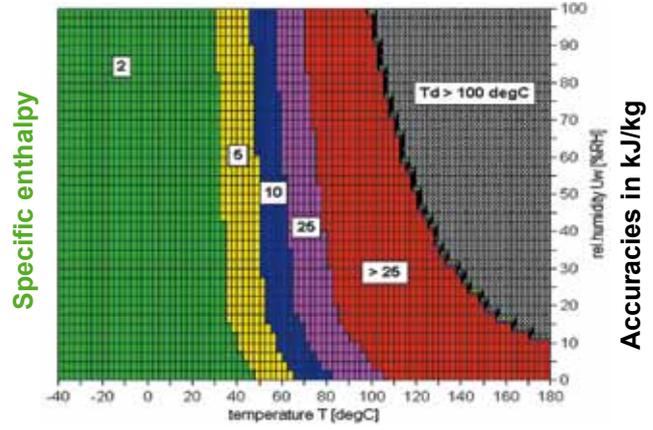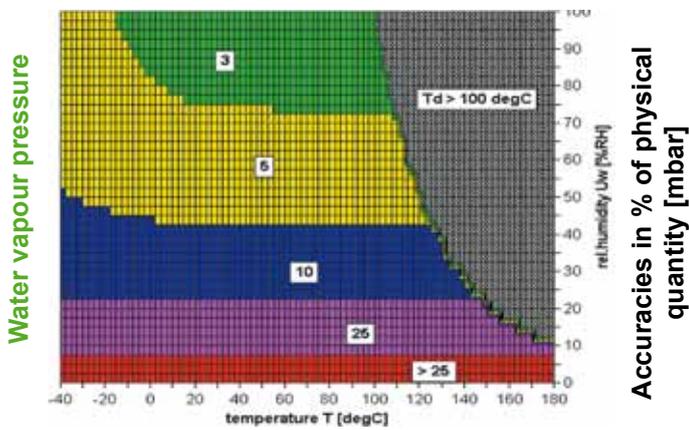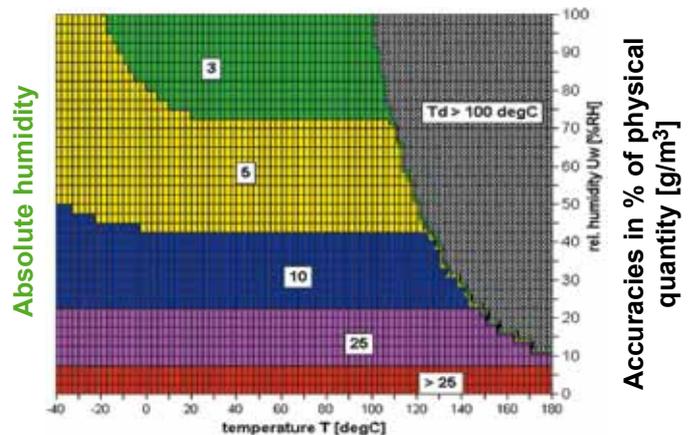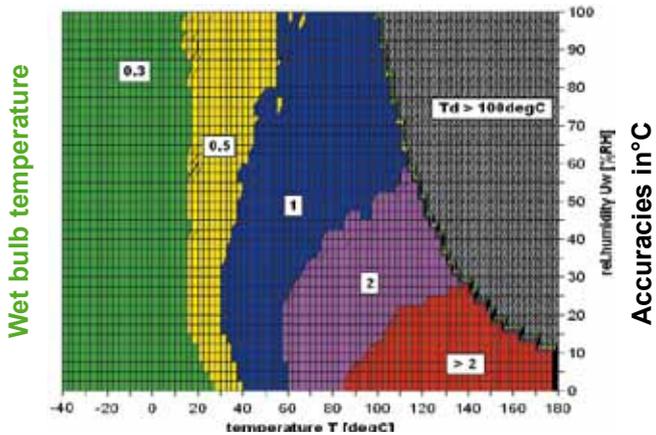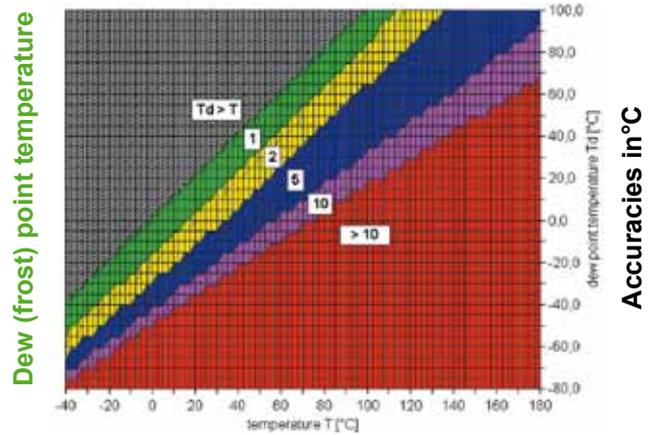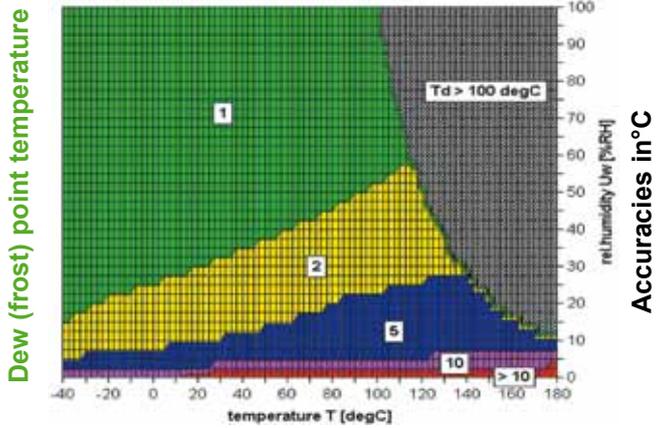

Accuracies of the calculated variables are subject to the accuracy of the humidity and temperature measurement.

The above accuracy values are valid for $\pm 2\%$ RH and $\pm 0.2^\circ\text{C}$ (0.36°F).

High accuracy values can be reached by a special humidity/temperature calibration.

Maintenance of RH Transmitters


Due to their excellent reliability and long time stability, under normal operation conditions the E+E relative humidity and temperature transmitters do not require any maintenance.

For use in high polluted environment the filter cap shall be periodically exchanged with a new original one.

For high accuracy requirements under extreme humidity and temperature working conditions, the transmitters can be periodically recalibrated.

The recalibration interval can be extended by a special E+E low - or high-humidity calibration.

The following graph shall be used as guide for the recalibration interval:

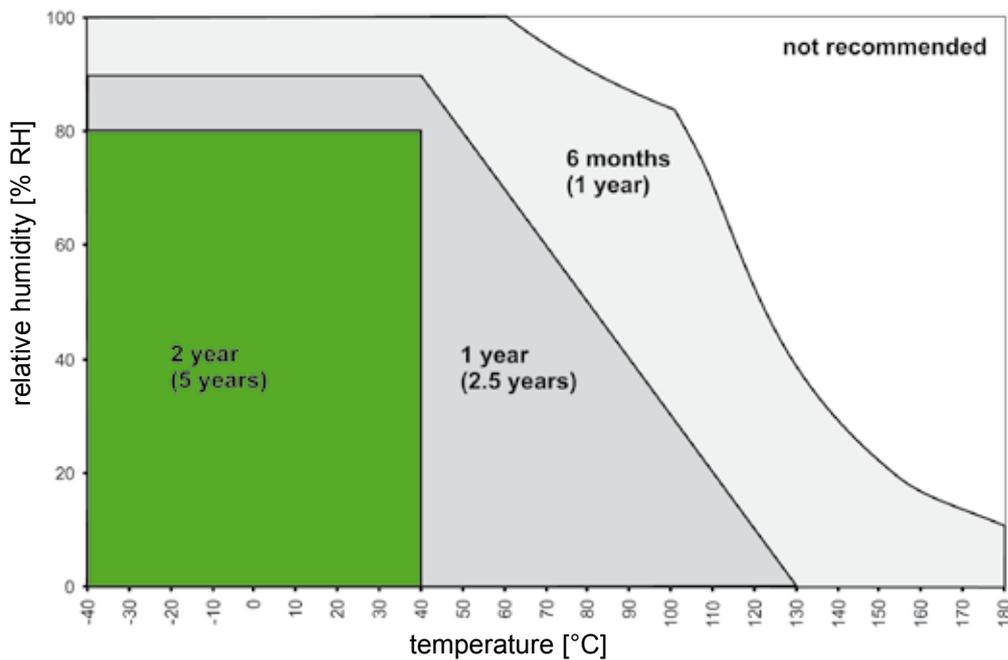

First value for measurement accuracy in the range $\pm 2\%$ RH
 Second value for measurement accuracy in the range $\pm 5\%$ RH